

Motorola XTS2500 Series Portable Radio

Change Zones

1. Press the soft key under the Zone menu item.


The zone name will begin to blink.

2. Use the left or right arrow on the navigation button to scroll zones.

3. When the desired zone is reached, press the home button.

4. Use the channel select knob to

change the channel name.

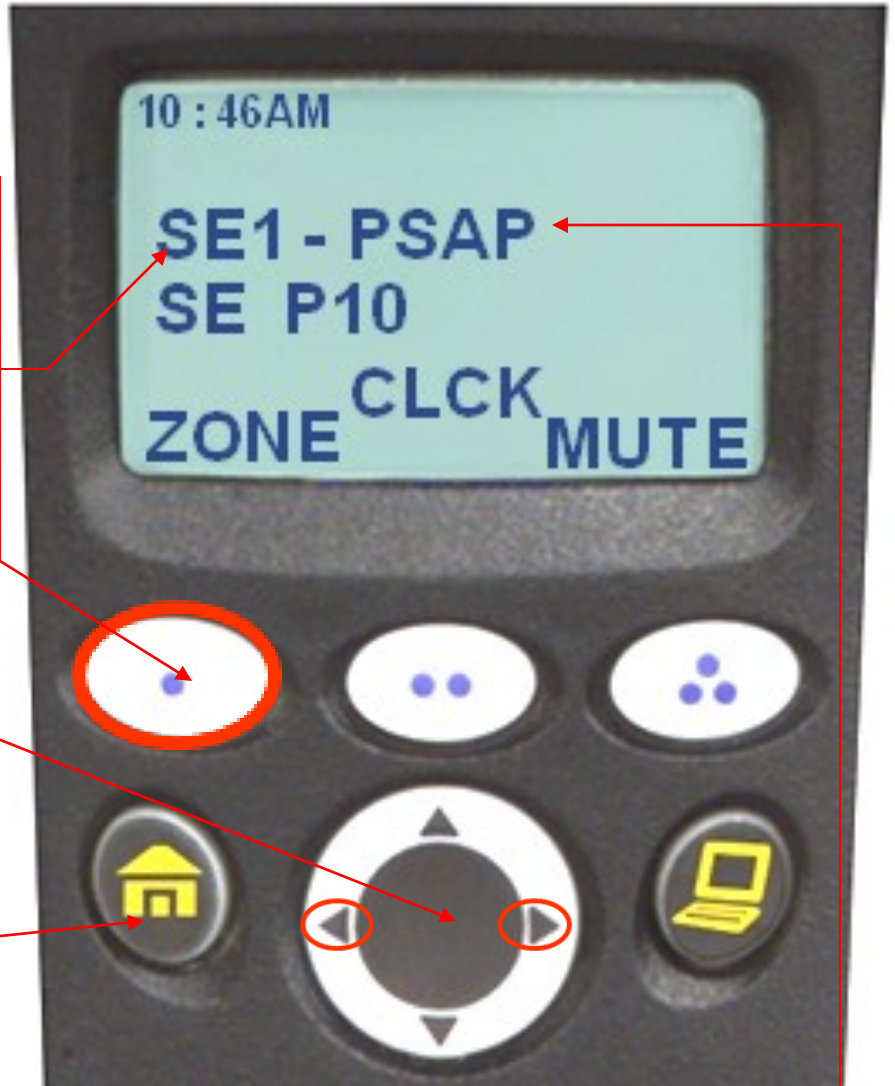

Motorola XTS2500 Series Radios



Top Side Button — Press and release to see the tower that the radio is affiliated with and the received signal strength (RSSI) as a number.

PTT Button — Push to talk. Wait for talk permit tone on digital channel.

Side Button 1 — Nuisance Delete

Side Button 2 — Turns on display light.

Power/Volume Control — Turns the radio on or off and adjusts volume.

Scan Switch — Position B Scan on - Position A or C Scan off.

Volume Set — Press and hold to obtain a tone to set the volume level.



Zone Name →	SE1
Channel 1	SE1-PSAP
Channel 2	SE1-MED
Channel 3	SE1-EOC
Channel 4	SE1-LE
Channel 5	SE1-EMGT
Channel 6	SE1-FIRE
Channel 7	SE1-EMS
Channel 8	SE1-PWKS
Channel 9	
Channel 10	
Channel 11	
Channel 12	
Channel 13	
Channel 14	
Channel 15	
Channel 16	

Used to talk to 9-1-1 Dispatch Centers.

Used to talk to Hospitals and EMS agencies.

Used to talk to Emergency Operations Centers and Emergency Managers.

Regional Law Enforcement Group - Only affiliates within the region.

Regional Emergency Management Group - Only affiliates within the region.

Regional Fire Group - Only affiliates within the region.

Regional Emergency Medical Group - Only affiliates within the region.

Regional Public Works Group - Only affiliates within the region.

Channels 9 through 16 will either be KHP Event Channels or will be unprogrammed. Event Channels are available for legitimate use without further authorization. They are statewide talkgroups.

