


# Motorola XTL1500 Series Mobile Radio

## Change Zones

1. Press the soft key under the Zone menu item or the zone select button.



2. Use the left or right arrow on the navigation button or the mode knob to scroll zones.

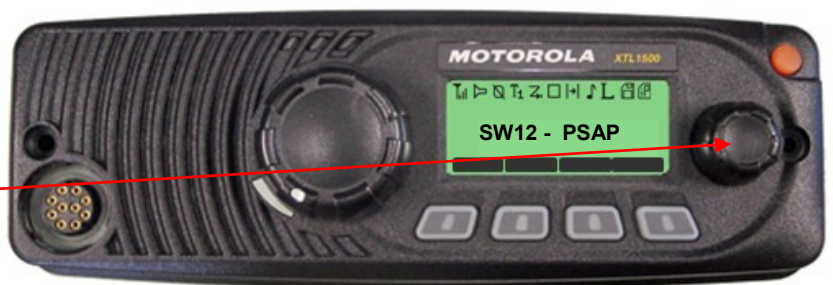

3. When the desired zone is reached, press the home button or the Push-to-Talk (PTT) to lock into the zone.



## Change Channels

4. Use the mode knob or the channel select button to change the channel.

If using the channel select button, use the left or right arrow on the navigation button to change the channel.

Use the Home Button or PTT to lock in the channel.



# Motorola XTL2500 Series Radios



RSSI Button — Use the left or right arrow on the navigation button to display RSSI on menu.  
Press and release to see the tower that the radio is affiliated with and the received signal strength (RSSI) as a number.

Display Dimmer Button — Toggles display brightness (Off - High-Medium-Low-Off)

Power/Volume Control — Turns the radio on or off and adjusts volume.

Zone → Name	SE1
Channel 1	SE1-PSAP
Channel 2	SE1-MED
Channel 3	SE1-EOC
Channel 4	SE1-LE
Channel 5	SE1-EMGT
Channel 6	SE1-FIRE
Channel 7	SE1-EMS
Channel 8	SE1-PWKS
Channel 9	
Channel 10	
Channel 11	
Channel 12	
Channel 13	
Channel 14	
Channel 15	
Channel 16	

Used to talk to 9-1-1 Dispatch Centers.

Used to talk to Hospitals and EMS agencies.

Used to talk to Emergency Operations Centers and Emergency Managers.

Regional Law Enforcement Group - Only affiliates within the region.

Regional Emergency Management Group - Only affiliates within the region.

Regional Fire Group - Only affiliates within the region.

Regional Emergency Medical Group - Only affiliates within the region.

Regional Public Works Group - Only affiliates within the region.

Channels 9 through 16 will either be KHP Event Channels or will be unprogrammed. Event Channels are available for legitimate use without further authorization. They are statewide talkgroups.

